


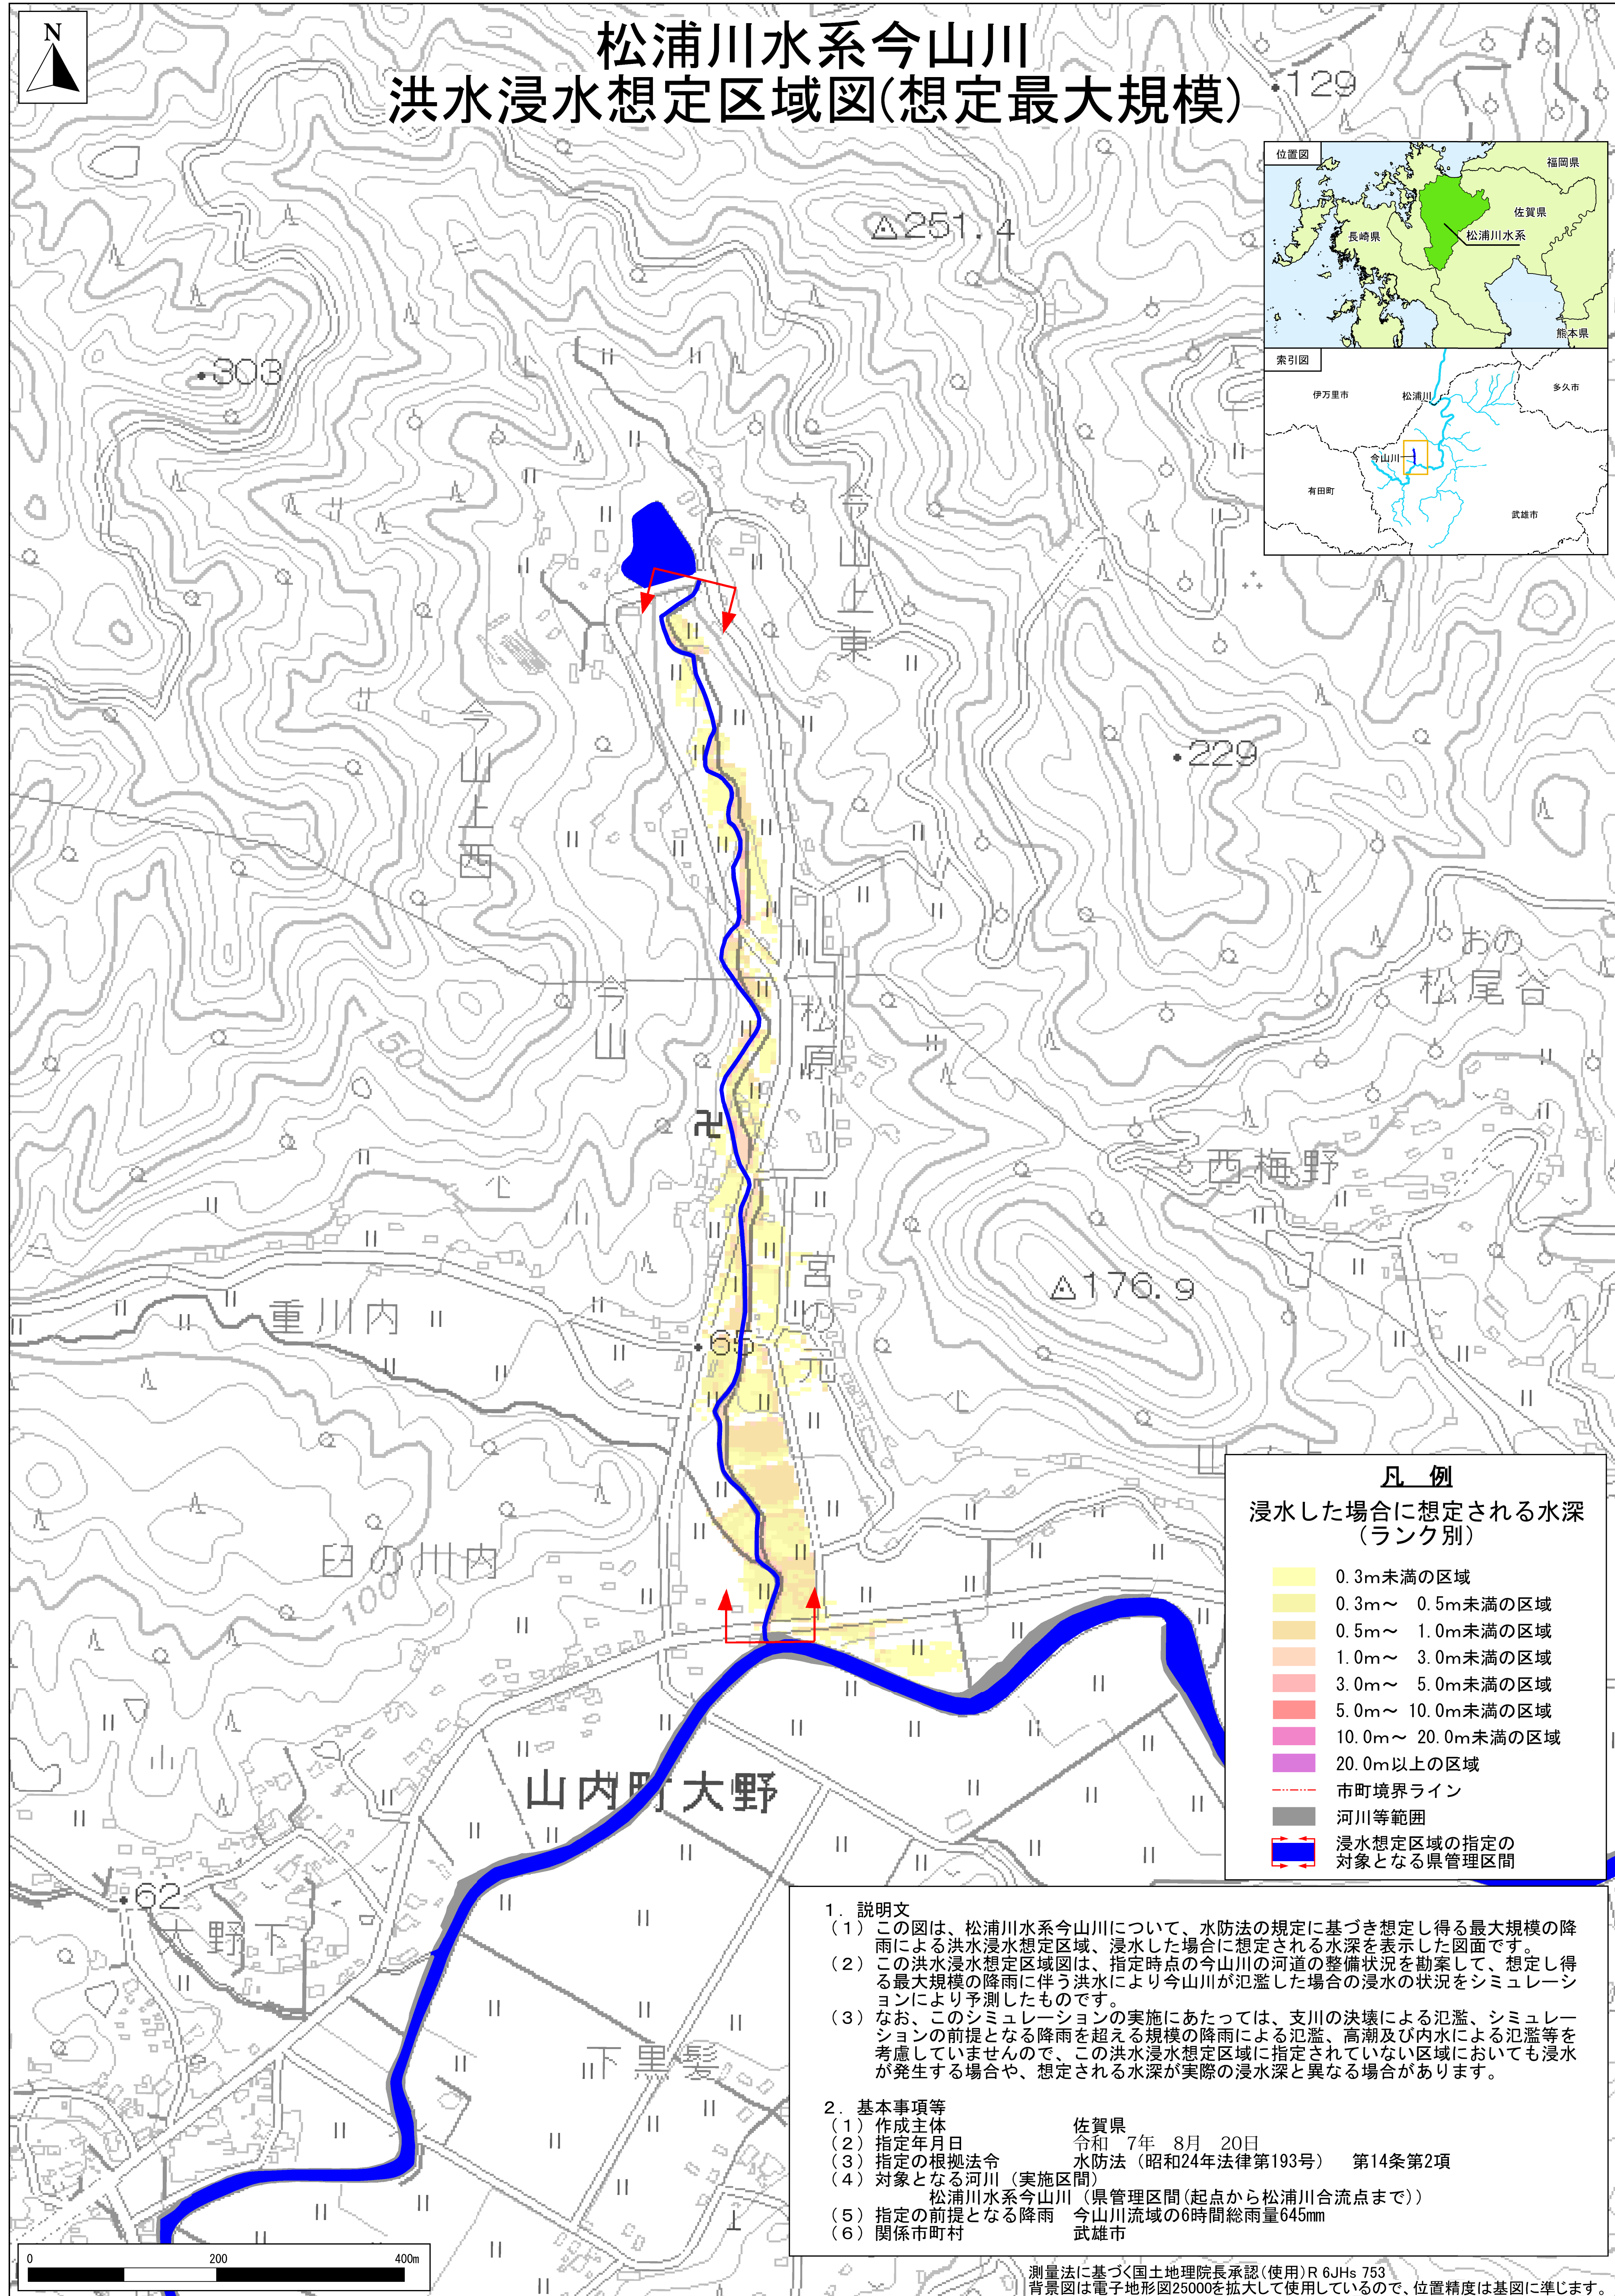

The top map shows the location of the Matsukawa River basin in Kyushu, Japan. The basin is highlighted in green, and an arrow points to it from the label '松浦川水系'. Surrounding prefectures are labeled: 福岡県 (Fukuoka Prefecture) to the north, 佐賀県 (Saga Prefecture) to the east, 熊本県 (Kumamoto Prefecture) to the south, and 長崎県 (Nagasaki Prefecture) to the west.

The bottom map, titled '索引図' (Index Map), shows the course of the Matsukawa River (松浦川) in detail. The river flows from the north towards the south, where it joins the Sagami River (Sagami River). Key locations marked include 伊万里市 (Imari City) to the northwest, 多久市 (Tsuho City) to the northeast, 今山川 (Imakawa) where the river joins the Sagami River, 有田町 (Arida Town) to the southwest, and 武雄市 (Takeo City) to the southeast. A blue box highlights the confluence area near Imakawa.



測量法に基づく国土地理院長承認(使用)R 6JHs 753
背景図は電子地形図25000を拡大して使用しているので、位置精度は基図に準じます。